

Belmont Media Stand


Emerson Media Stand

Myles Media Stand


CARE & CLEANING

Clean the wood and lacquer surfaces with a damp, soft cloth, and then dry. The base may be polished with a soft cloth and gentle cleaner.


Do not use abrasive cleaning products.

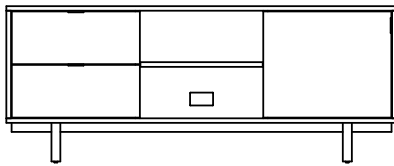

Belmont Media Stand

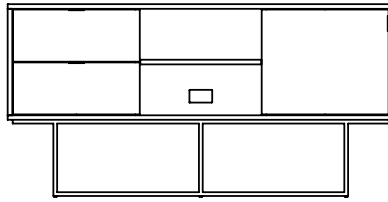


Emerson Media Stand

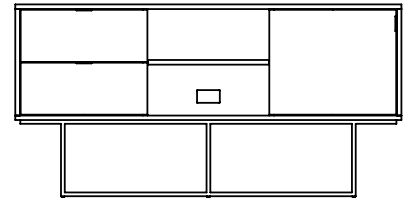


Myles Media Stand

SHELF SUPPORTING PINS AND ADJUSTABLE SHELVINGS INSTALLATION

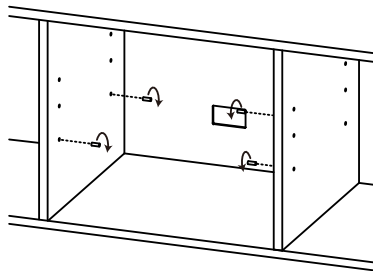


Determine the height where you would like your shelf to sit and gently screw the supporting pins into the 4 corresponding holes. To maximize stability, periodically tighten the supporting pins.

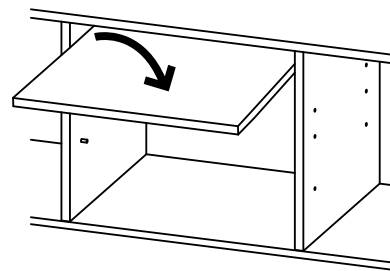


Slowly rest the shelving panel on top of the pins. Line up the four pins with cut-outs on the bottom of the shelving panel.


DOOR REMOVAL

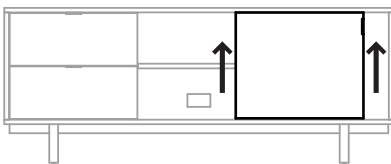

To remove the sliding door, hold both sides and lift slightly until the bottom edge is free from the lower track.

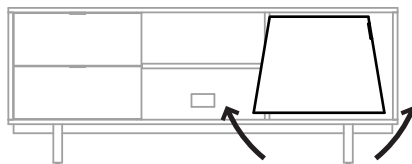

Tilt the bottom edge of the door toward you until it clears the front edge of the unit.

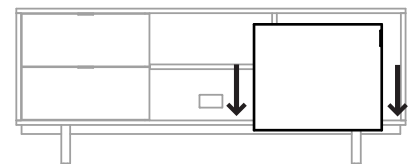

Lower the door until it becomes free from the upper track.

DOOR INSTALLATION

To re-install the sliding door, complete the above steps in reverse order.