


Ethnicraft

RIBBON

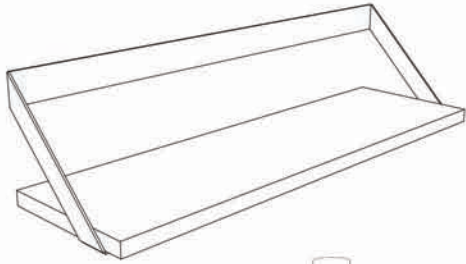


25kg
MAXIMUM LOAD

ASSEMBLY INSTRUCTIONS

Ethnicraft


RIBBON

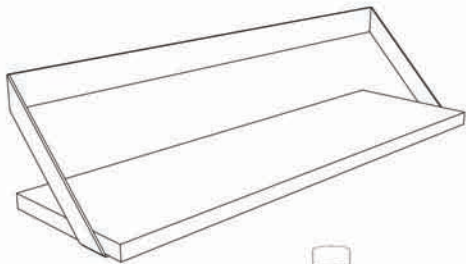


25kg
MAXIMUM LOAD

ASSEMBLY INSTRUCTIONS


HARDWARE (included in package)

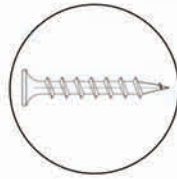

Wall screw f5x50 - 2pcs

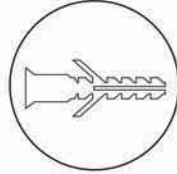


Wall plug 08x40 - 2pcs

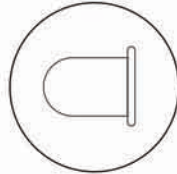

Silicon bumper - 4pcs

Tools (NOT included in package)

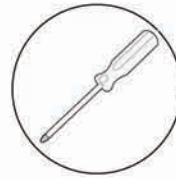


Screwdriver

Drill machine




Pencil

Leveler

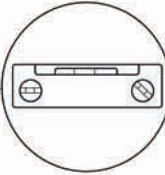


2.

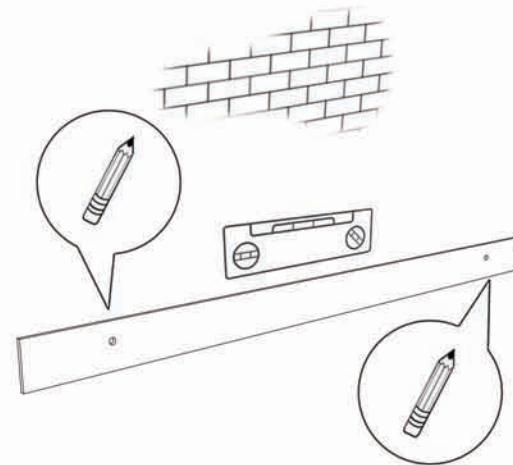


- Place the stencil (stencil is included in packaging) on the wall and mark the position of the holes
- Use leveler to find horizontal

3.

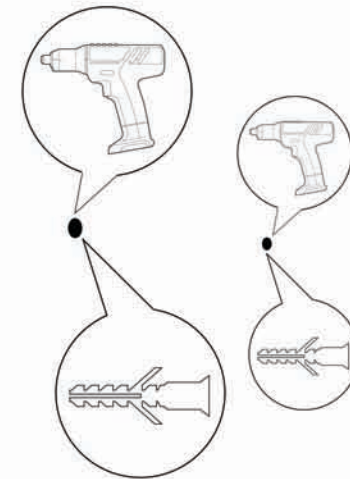


- Drill the marked holes
- Insert wall plugs

1.

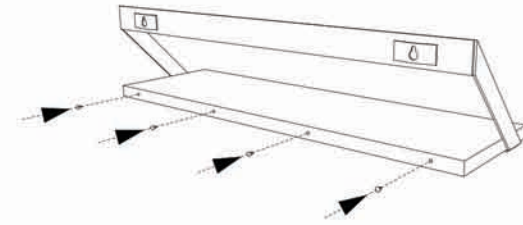


- Insert the silicon bumpers in to the wooden shelf

4.


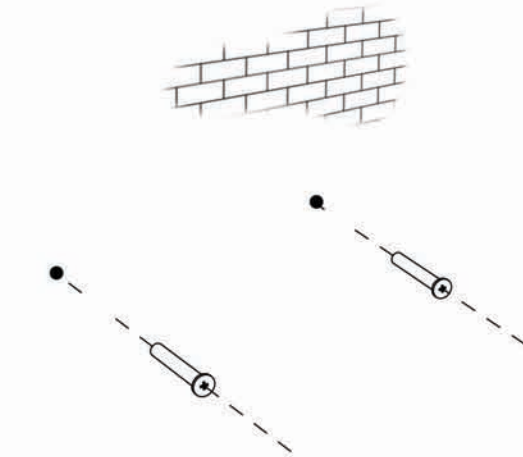


- Insert the wall screws into the wall plugs

5.

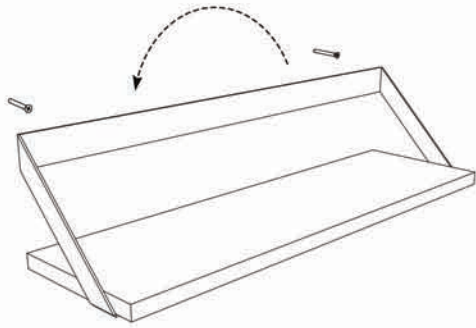

6.

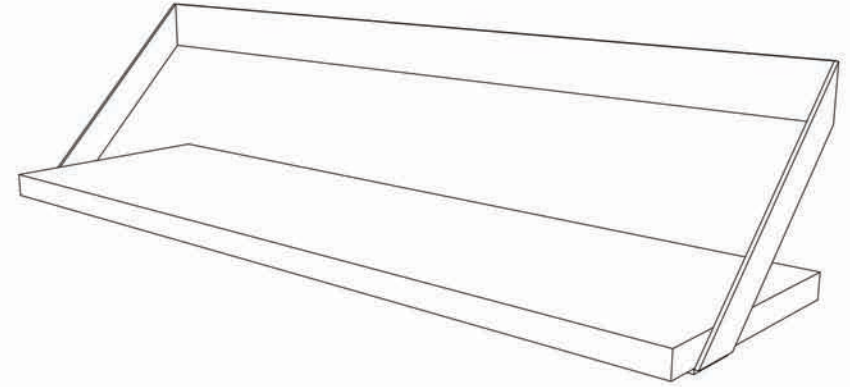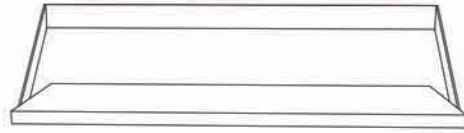

- Hang assembly on the wall screws

- Assembled product